

Cloth Tape No. 600S



Cloth tape with more cost performance.

Usage

- Mailing many computers and related products
- Home delivery service
- Moving

Performance		
Test items	Unit	No. 600S
Thickness of tape	mm	0.288
Thickness of base material	mm	0.190
Adhesive strength	N/10mm (g/10mm)	2.88 (293)
Tack	Ball No.	30
Unwinding force	N/10mm (g/10mm)	2.30 (235)
Holding power	mm	0.0
Tensile strength	N/10mm (K g/10mm)	43.0 (439)
Elongation	%	9

* The figures in the table above are measurements and are not guaranteed values.

Specifications			Base color
Size W (mm) × L (m)	Unit packaging (rolls)	One package (rolls)	Color of cardboard box
50×25	1	30	

Method of Choosing Tape

Please refer to the points below when choosing a suitable tape for your adhesive needs.

1 Do you want a permanent adhesive, a one time adhesive, or a removable one?

- Choose an adhesive to meet your needs.



2 How much and what kind of strength must the tape have, and how long must it hold?

- Match it with your elasticity needs.




3 Investigate the production environment (application by hand/machine, production area, production time, production employees)!

- Choose tape that will make your packaging go smoothly.



4 What are the environmental conditions (inside/outside, temperature, humidity, solvent, medicine, etc.)?

- Choose a product to meet your environmental needs.

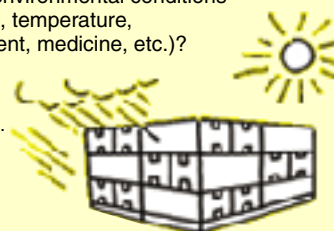

5 What are your shipping conditions (shipping method, storage conditions, package opening method, etc.)?

- Choose tape that makes opening packages easy upon arrival at their destination.



6 What other functions do you need (protection, masking, indication, etc.)?

- Match each use and aim



Cautions for Use

- Packaging tape is for sealing cardboard boxes, home delivery, light wrapping, and other packaging uses. It is not to be used for anything else.
- Do not adhere it to the body.
- Do not use it for electrical insulation.
- Adhere it after wiping the adhesive surface well, so it is free of dust and oil.
- Press down hard when adhering it.
- It is best to store the rolls on their sides in low temperature and low humidity places.
- Be sure to check each product's "Cautions for Use" before use.

Heavy packaging

Tear-able
by hand

Non-slip

Writable

Stackable

Bundling

Low
temperature